



Live in a world of infinite possibilities.

Samsung GALAXY S4 | Life companion



Samsung Electronics Accessibility Statement

Samsung Electronics is committed to a world where every user and customer, including people with disabilities or impairments, can communicate across borders and enjoy a better life.

DISABILITY FACTS

- Around 3.4 million Australians have a physical disability.
- Around 300,000 Australians have substantial vision impairment.
- Estimated 1 in 6 Australians are affected by hearing loss.



Samsung
GALAXY S4



Phone setup

Accessibility settings can be accessed from when you first turn on the Galaxy S4. Allowing users with impaired vision or hearing to optimize their Galaxy S4 to their individual needs.

Settings Menu

Accessibility options can be accessed within the 'Settings' menu, allowing users the ability to adjust the GS4 to their individual special needs.



Samsung
GALAXY S4

Categories - General

Auto-rotate screen: automatically rotate the screen from landscape to portrait when you rotate your phone.

Screen timeout: timeout the accessibility feature after a defined amount of time.

Secured lock time: allows you to set the time of inactivity that passes before your screen locks.


Speak passwords: reads out password information.

Answering/ending calls: accept incoming calls by pressing the home key or end calls using the power key.

Show shortcuts: allow the accessibility shortcut under the device options to be used by pressing and holding the power key.

Manage accessibility: save and update your accessibility settings or share them with another device. You can export your settings, import a previously saved file, or share your file with another device.

TalkBack: activate the TalkBack feature. Note: TalkBack, when installed and enabled, speaks feedback to help blind and low-vision users. TalkBack can collect all of the text you enter, except passwords, including personal data and credit card numbers. It may also log your user interface interactions with the device.

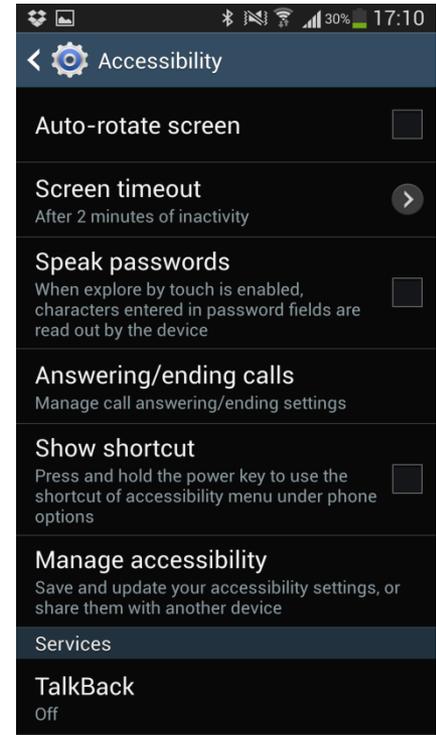

Samsung
GALAXY S4

Categories - Vision

Font size: change the size of the fonts used on the device within menus, options, etc. Choose from: Tiny, Small, Normal, Large, or Huge.

Magnification gestures: use exaggerated gestures such as triple-tapping, double pinching, and dragging two fingers across the screen.


Negative colors: reverse the display of on-screen colors from White text on a Black background to Black text on a White background.

Color adjustment: allows you to adjust the display colors if you are color blind and have difficulty reading the display because of the colors. Touch and slide the slider to the right to turn it on . Follow the on-screen instructions.

Accessibility shortcut: allows you to quickly enable accessibility features in 2 quick steps. Touch and slide the slider to the right to turn it on . Follow the on-screen instructions.

Text-to-speech options: allows you to adjust your text-to-speech settings.

Enhance web accessibility: allows apps to install scripts from Google that make their Web content more accessible. Tap Allow.

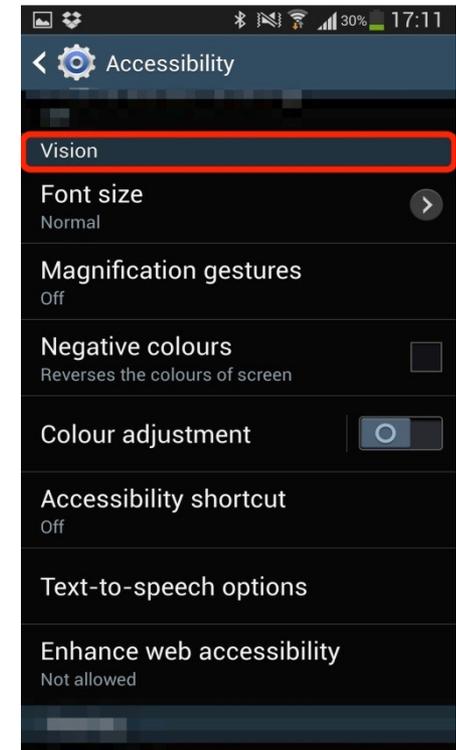

Samsung
GALAXY S4


Categories - Hearing

Sound balance: allows you to use the slider to set the Left and Right balance when using a stereo device.

Mono audio: allows you to enable stereo audio to be compressed into a single mono audio stream for use with a single earbud/earphone.

Turn off all sounds: allows you to mute every sound made by the device during taps, selections, notifications, etc.

Flash notification: allows you to set your camera light to blink whenever you receive a notification.

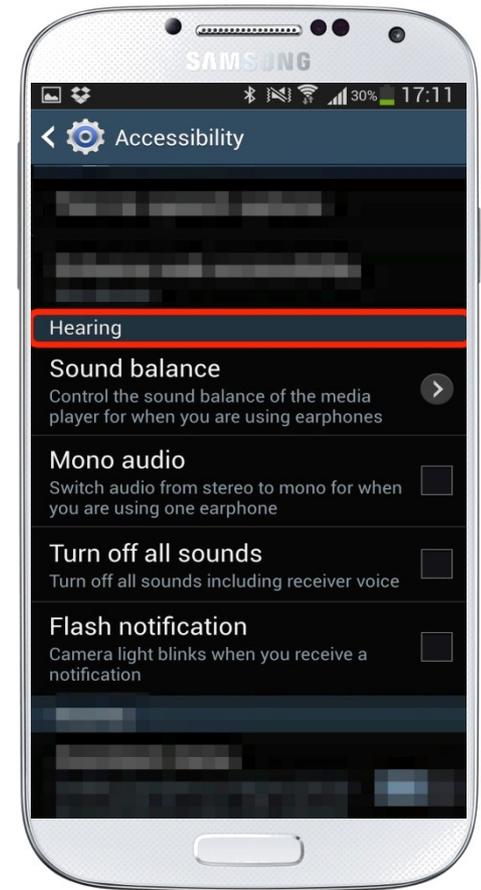


Samsung
GALAXY S4

Categories - Mobility & Recognition

Assistant menu: allows you to improve the device accessibility for users with reduced dexterity. Touch and slide the slider to the right to turn it on. Follow the onscreen instructions.

Tap and hold delay: allows you to select a time interval for this action. Choose from: Short, Medium, or Long.

Interaction control: allows you to enable or disable motions and screen timeout. You can also block areas of the screen from touch interaction. Touch and slide the slider to the right to turn it on. Follow the on-screen instructions.

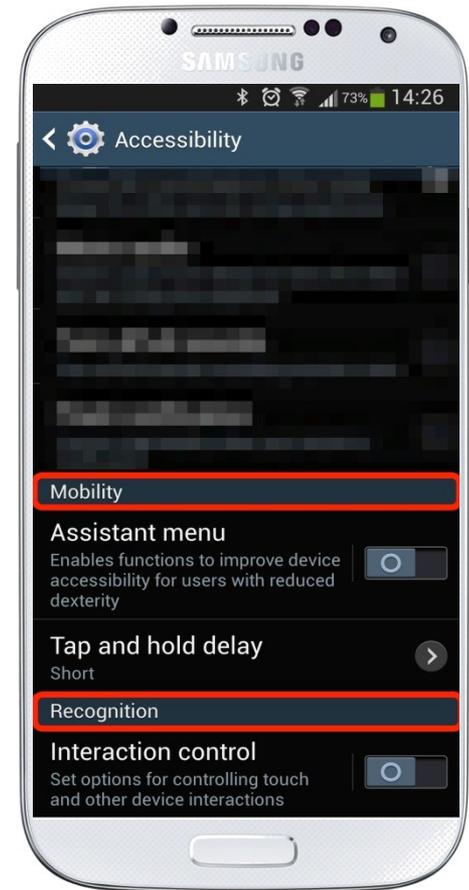

Samsung
GALAXY S4